


Setting up the Horse Walker

A cement pad is not necessary or required for the Trojan Horsewalker. However, if you prefer a solid pad, the following recommendations are as follows.

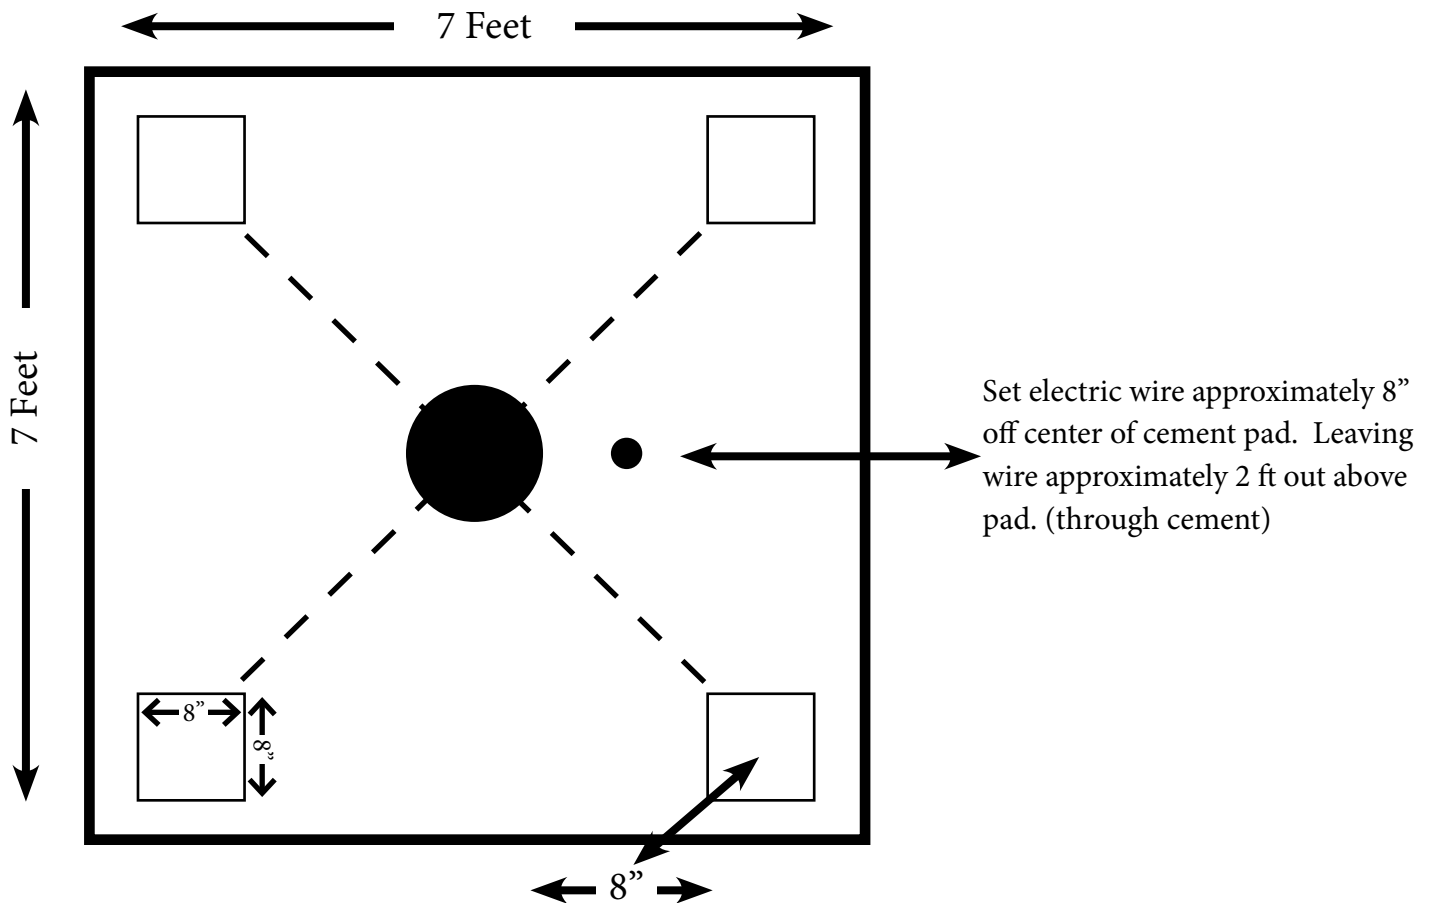

8" x 8" Steel Weld Plates — — — — —
 allows base of the horse walker
 to be welded or bolted directly to the cement pad.

The 8" x 8" plates should be set in the cement pad, flush with the top. Set in approximately 8" off each corner to prevent cracking.

We recommend 8" x 8" square plates a minimum of 1/4" thick steel, with rebar set in the cement.

PLEASE NOTE: If your area has particularly sandy soil a cement pad may be preferred. A cement pad also nearly eliminates grass and weeds growing in the horse walker area.